

INSTALLATION & INSTRUCTION MANUAL



DISTRIBUTED BY:

LIT-U3/U4-MAN 11/08/21



UNDER COUNTER  
DRINKING WATER SYSTEM  
3 & 4 STAGE SYSTEMS





*Serious Filtration for a healthy planet<sup>SM</sup>*



## TABLE OF CONTENTS

|  |       |
|--|-------|
| Initial Inspection.....                    | 3     |
| Operation Parameters.....                  | 4     |
| Plumbing Schematic.....                    | 5     |
| Pre-Installation.....                      | 6     |
| Faucet Installation.....                   | 6-8   |
| Angle stop valve adaptor Installation..... | 8-9   |
| Unit Placement & Mounting.....             | 10    |
| Flowlok Leak Control Valve.....            | 10    |
| Tubing Connections.....                    | 11-12 |
| System Start Up.....                       | 13    |
| Flushing the System.....                   | 13    |
| Filter Replacement.....                    | 14    |
| Troubleshooting.....                       | 15    |
| Liability & Warranty.....                  | 17    |

215.9 mm (8.5" H)

| LEGEND  |                    |
|---|--------------------|
|    | CAUTION / WARNING  |
|  | EYE PROTECTION     |
|  | ELECTRICAL WARNING |
|  | FRAGILE            |



**WARNING: READ ENTIRE MANUAL. FAILURE TO FOLLOW ALL GUIDES AND RULES COULD CAUSE PERSONAL INJURY OR PROPERTY DAMAGE.**


Check with your state and/or local public works department for plumbing codes. You must follow their guides as you install the Water Filtration system.

*NOTE: Failure to comply with these installation instructions will void the product Warranty, and the installer will be responsible for any service, repair or damages caused thereby.*



**WARNING: DO NOT USE WITH WATER THAT IS MICROBIOLOGICALLY UNSAFE OR OF UNKNOWN QUALITY WITHOUT ADEQUATE DISINFECTION BEFORE OR AFTER THE SYSTEM.**

## MODELS

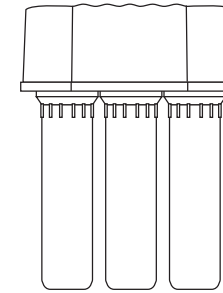


**U3000 SERIES**  
3 STAGE UNDER COUNTER  
DRINKING WATER SYSTEMS

### U3000 MODELS

**U3000-MCB**  
MICROBAN® CARBON BLOCK  
(HDG-SED5, HDG-MCB & HDG-CB5P)

**U3000-CER**  
MICROCERAMIC  
(HDG-SED5, HDG-CER & HDG-CB5P)

**U3000-UF**  
ULTRAFILTRATION  
(HDG-SED5, HDG-UF & HDG-CB5P)

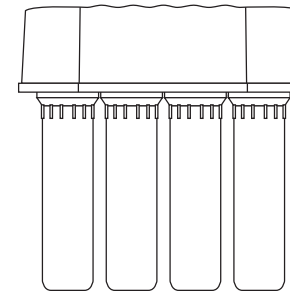

**U4000 SERIES**  
4 STAGE UNDER COUNTER  
DRINKING WATER SYSTEMS

### U4000 MODELS

**U4000-MCB**  
MICROBAN® CARBON BLOCK  
(HDG-SED5, HDG-MCB, HDG-SIL & HDG-CB5P)

**U4000-CER**  
MICROCERAMIC  
(HDG-SED5, HDG-CER, HDG-SIL & HDG-CB5P)

**U4000-UF**  
ULTRAFILTRATION  
(HDG-SED5, HDG-UF, HDG-SIL & HDG-CB5P)

*NOTE: To download product specifications go to: <http://hydroguardwater.com/resources>*



## OPERATION PARAMETERS

**WARNING!!** The following conditions for feed water supply must be met or Warranty will be void.

1. Unit **MUST** be connected to a municipal or well water source that is treated and tested on a regular basis to insure water is microbiologically safe.
2. Operating temperatures:  
Maximum: 105° F (40.6° C)  
Minimum: 33° F (0.55° C)
3. Inlet Pressure **MUST NOT EXCEED** 80 PSI (5.6 kg/cm<sup>2</sup>)

**CAUTION!!** DO NOT ALLOW SYSTEM TO FREEZE. The membrane always contains water and will be destroyed if frozen.

**WARNING!!** DO NOT PLUMB SYSTEM TO HOT WATER. This will destroy the membrane and void the Warranty and manufacturer's responsibility.

4. Operating pressure:  
Maximum: 80 PSI (5.6 kg/cm<sup>2</sup>)  
Minimum: 40 PSI (2.95 kg/cm<sup>2</sup>)

This reverse osmosis system is designed to operate at a water pressure in the range of: 40 to 80 PSI (2.95 kg/cm<sup>2</sup> to 5.6 kg/cm<sup>2</sup>).

- At pressures lower than this, the quantity as well as quality will be reduced.
- At higher pressure, severe damage to the system may result.

A pressure regulator **MUST** be installed on the feed water source, which reduces the water pressure coming into the system.

**WARNING!!** Warranty voided and manufacturer assumes no responsibility for damage to system or property if pressure exceeds 80 PSI.

5. Turbidity: <5 NTU
6. pH: 4 to 11
7. Recommended hardness **NOT TO EXCEED 7 grains per gallon, or 120 PPM.**

*(If the hardness of your water is above 10 gpg (171 mg/L), lime scale will build up rapidly on the membrane. Scale buildup will plug the membrane and make the system ineffective. We do not recommend these reverse osmosis systems be used with water in excess of 10 gpg (171 mg/L) hardness, unless the water is softened prior to the reverse osmosis system.)*

- Sulfide, Iron and Manganese: less than 0.01 ppm.
- Chlorine In Water Supply: less than 2 ppm.
- Water Supply pH Limits: 4-11.
- Turbidity: 1 NTU Max.

*RECOMMENDATION: If your water hardness exceeds 7 grains per gallon, or 120 PPM you may wish to purchase a water softener. Contact your local dealer or distributor for pricing and availability.*

8. Recommended Total Dissolved Solids (TDS) **NOT TO EXCEED 1,000 ppm.**

## LIABILITY & WARRANTY

### LIABILITY

**WARNING!!!** The installer is responsible for any leaks resulting from installation of tubing or related fittings. **THE INSTALLER MUST CHECK OVER THE ENTIRE SYSTEM COMPLETELY WHILE UNDER PRESSURE TO ENSURE SYSTEM IS NOT LEAKING AND FUNCTIONING PROPERLY.** Liability resulting from failure to check for leaks under pressure is the sole responsibility of the installer.

### WARRANTY

**THREE YEAR LIMITED Warranty ON DRINKING WATER SYSTEM**  
(Except filter cartridges and R. O. membrane)

Warrantor guarantees, to the original owner, that the Drinking Water System, when installed and maintained in accordance with the instructions, will be free from defects in materials and workmanship for a period of one year from date of installation. If, within the first year, a part proves, after inspection, to be defective, Warrantor will, at its sole option, either replace or repair the part without charge except normal shipping and installation charges. Labor to maintain the equipment is not part of the Warranty. Filters and membranes, which are expendable, are not covered by the Warranty.

This Warranty applies only while this product is in use in the United States or Canada.

#### General Provisions

The above warranties are effective provided the Drinking Water System is operated at water pressures not exceeding 80 psi, and at water temperatures not exceeding 113°F; provided further that the Drinking Water System is not subject to abuse, misuse, alteration, neglect, freezing, misapplication, neglect, alteration, water pressure spikes, accident or negligence; and provided further that the Drinking Water System is not damaged as the result of any unusual force of nature such as, but not limited to, flood, hurricane, tornado or earthquake. Warrantor is excused if failure to perform its Warranty obligations is the result of strikes, government regulation, materials shortages, or other circumstances beyond its control.

\*THERE ARE NO WARRANTIES ON THE FILTRATION DRINKING WATER SYSTEM BEYOND THOSE SPECIFICALLY DESCRIBED ABOVE. ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED Warranty OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED TO THE EXTENT THEY MIGHT EXTEND BEYOND THE ABOVE PERIODS. THE SOLE OBLIGATION OF WARRANTOR UNDER THESE WARRANTIES IS TO REPLACE OR REPAIR THE COMPONENT OR PART WHICH PROVES TO BE DEFECTIVE WITHIN THE SPECIFIED TIME PERIOD, AND WARRANTOR IS NOT LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. NO WARRANTOR DEALER, AGENT, REPRESENTATIVE, OR OTHER PERSON IS AUTHORIZED TO EXTEND OR EXPAND THE WARRANTIES EXPRESSLY DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied Warranty lasts or exclusions or limitations of incidental or consequential damage, so the limitations and exclusions in this Warranty may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from state to state. This Warranty applies to consumer-owned installations only. This Warranty does not cover any equipment that is relocated from the site of its original installation.




## PRE & FAUCET INSTALLATION

**IMPORTANT!! PLEASE READ, FOLLOW AND SAVE THIS INSTRUCTION MANUAL.**

### 1. PRE-INSTALLATION PROCEDURE

1. This unit includes a standard sink top faucet without an air-gap. In localities where plumbing codes require installation of an air-gap, contact your local distributor to obtain a code approved drain line adaptor.
2. The water filtration system may be mounted to the side of the sink cabinet or set on the floor of the sink cabinet. It must be positioned to allow access for service and filter changes. The assembly should be relatively near the faucet to maximize flow rate. (See *DIAGRAM A* for a positioning example.)
3. The faucet should be positioned to allow a free flow pattern into the sink. It must be positioned to allow ready access to the mounting hardware under the sink. (See *DIAGRAM A* for a positioning example.)

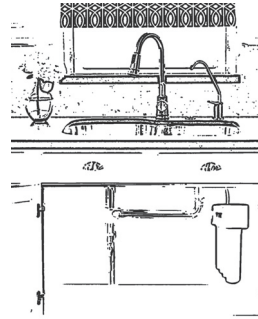

**DIAGRAM A**

### 2. FAUCET INSTALLATION

**CAUTION!!** Extreme care must be taken in drilling the hole for the sink-top faucet. The surface material of most sinks is extremely hard and brittle and can be easily chipped or cracked. If you are uncomfortable performing the following procedure it is recommended that your local distributor or experienced plumber be consulted for techniques, installation or other assistance. The system's manufacturer accepts no responsibility for sink top damage resulting from system installation. **EXTREME CAUTION SHOULD BE TAKEN WITH GRANITE, MARBLE AND LIKE MATERIAL.**

**CAUTION!!** Before grinding or drilling put on appropriate eye protection (i.e. goggles) to protect yourself from porcelain or metal chips.

**CAUTION!!** To avoid damaging the sink, consult a qualified plumber or installer for drilling procedures. Special drill bits may be needed for porcelain or stainless steel.

**WARNING:** Many homes are electrically grounded through the plumbing. To protect yourself from serious injury or fatal shock, use a battery-powered hand drill only to make the hole. **DO NOT USE AN ELECTRIC DRILL.**

1. **BEFORE DRILLING:** Check under the sink in the area that you plan to install the faucet and make sure that there is a flat surface to secure the mounting hardware. A flat space of approximately 2 inches in diameter is needed.

*RECOMMENDATION: Before drilling or grinding mask off the immediate area surrounding the grinding/drilling location preferably with duct tape or if duct tape is unavailable masking tape may be used. This procedure should help prevent scratching of the sink surface.*

## TROUBLESHOOTING

### TROUBLESHOOTING

#### NOT ENOUGH WATER

| POSSIBLE  | CAUSE / SOLUTION   |
|---|--|
| Angle Stop Valve is plugged or closed.                      | Open valve or unclog.  |
| Sediment/Carbon prefilter or Carbon Post Filter is clogged. | Replace Filters.   |
| Low incoming water pressure.                                | Incoming water pressure must be above 40 PSI. Install a Booster Pump or Permeate Pump. |

#### LOW WATER PRESSURE FROM DISPENSING FAUCET

| POSSIBLE                                   | CAUSE / SOLUTION          |
|--|---------------------------|
| Carbon Post Filter is clogged.             | Replace Post Filter.      |
| The Faucet is out of adjustment or faulty. | Repair or replace Faucet. |

#### TASTES AND ODORS IN PRODUCT WATER

| POSSIBLE                         | CAUSE / SOLUTION                      |
|----------------------------------|---------------------------------------|
| Carbon Post Filter is exhausted. | Replace Filter.                       |
| Dissolved gases in feed water.   | Pre-treat feed water to remove gases. |

#### FAUCET LEAKS OR DRIPS

| POSSIBLE                       | CAUSE / SOLUTION  |
|--------------------------------|---|
| Water leaks from faucet spout. | Adjust faucet by turning the tee bar located under the handle to provide a small amount of free play in the handle when shut off. Should this not work, repair or replace the faucet. |
| Leaks from beneath the handle. | Repair or replace the faucet.   |

#### NO WATER


| POSSIBLE                        | CAUSE / SOLUTION      |
|---------------------------------|-----------------------|
| Water is shut off at stop valve | Open main stop valve. |

## FILTER REPLACEMENT

### 9. FILTER REPLACEMENT INSTRUCTIONS

(U4000 - 4 Stage Under the Counter Model shown).

#### STEP 1

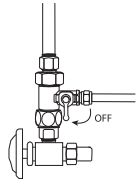


#### TURN WATER OFF

Shut-Off the water supply and tank valve. Open the faucet and let water run to approx. 1-2 minutes to depressurize the system

*Note: Place a towel or rag under the system to avoid water spills*


#### STEP 2

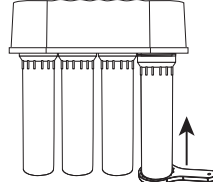

#### USE FILTER WRENCH TO REMOVE HOUSING

Introduce filter wrench to top of filter housing


#### STEP 3

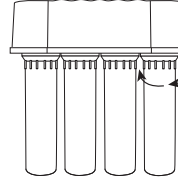

#### UNSCREW HOUSING

Unscrew to the left to open housing


#### STEP 4

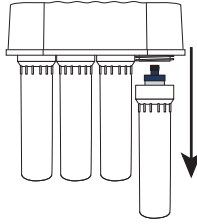

#### REMOVE FILTER & HOUSING

Unscrew housing and lower to reveal filter. Pull filter down into housing and remove

#### STEP 5

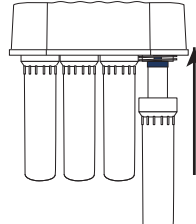


#### REPLACE FILTER

Place New Cartridge in Housing making sure O-Ring seals are on top. Bottom of cartridge should seat in cup at bottom of Housing

*Note: rinse housing thoroughly and scrub with soft brush before reinstalling new cartridge*


#### STEP 6

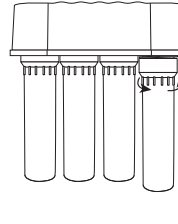

#### SCREW BACK HOUSING

Raise Housing and screw on towards right by hand


#### STEP 7

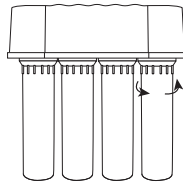

#### TIGHTEN FILTER

Hand tighten to the right until snug connection is made. **DO NOT OVERTIGHTEN!**

 
#### STEP 8



#### TURN WATER ON

Turn-On the water supply and tank valve (Turn handle to horizontal position)

#### STEP 9

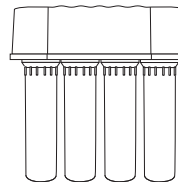

#### PURGE SYSTEM

See page 13 (Section 7 & 8) for instructions.

*Note: Remove towel/rag once system has run and no leaks have been found*

## FAUCET INSTALLATION (Continued)

- REMOVE EVERYTHING FROM INSIDE THE SINK AND SURROUNDING AREA. Place paper towels in the sink to catch the shavings from the grinding and drilling.
- Using a cordless drill with a carbide grinding burr, gently grind away enough porcelain or enamel to more than accommodate the 7/16" (11 mm) drill bit. Approximately the size of a dime. Enough surface material must be removed to expose the base metal.

**CAUTION!!** Porcelain or enamel must be completely removed in the drilling area to prevent immediate dulling of drill bit.

- Remove everything from under the sink.
- Place newspaper or paper towels directly under drilling location in order to catch the drill shavings.
- Using the 1/4" (6 mm) drill bit, drill a centering or pilot hole in the center of the desired faucet location.

*NOTE: this centering/pilot hole will make it easier for the 7/16" (11 mm) drill bit to cut through the sink. Operate the drill slowly and carefully— Especially when the drill bit is about to penetrate the metal. Otherwise, damage to sink may occur. Use lubricating oil to keep the drill bit cool while drilling.*

- Discard paper towels and newspaper used in sink and below sink. Be very careful not to drop any shavings in sink or on the floor as they will oxidize and stain surfaces very quickly.

*HELPFUL HINT: If you notice any rust spots from dropped shavings you should be able to get rid of them by scrubbing them with a cleaning chemical.*


- Cover the drilled hole with your finger **BE VERY CAREFUL NOT TO CUT YOURSELF ON SHARP EDGES!** Rinse sink then scrub with cleaner to prevent any rusting from shavings and to prepare for faucet installation. Plug hole again while rinsing off cleaner. Hole must be plugged in order to avoid water dripping below into sink cabinet, which may cause damage.
- Remove faucet from package.

**For steps 10-13 refer to DIAGRAM B on page 8.**

- Slip the small, thin rubber gasket over the faucet shank. Next slip the chrome trim plate (escutcheon plate) over the faucet shank. Finally, slip the large, thin rubber gasket over the faucet shank.
- Place the faucet shank complete with only hardware installed in step 11 through the drilled hole.
- From under the sink slip the large, black plastic, locating washer over the faucet shank. Next, slip the lock washer over the faucet shank followed by the thin chrome nut.
- While holding the faucet assembly above the sink tighten the chrome nut below the sink with an adjustable wrench. Tighten the chrome nut until the faucet assembly does not move.

**CAUTION!!** DO NOT OVERTIGHTEN THE CHROME NUT. Overtightening can cause damage to the sink or faucet assembly.

## DIAGRAMS B, C, D, & E

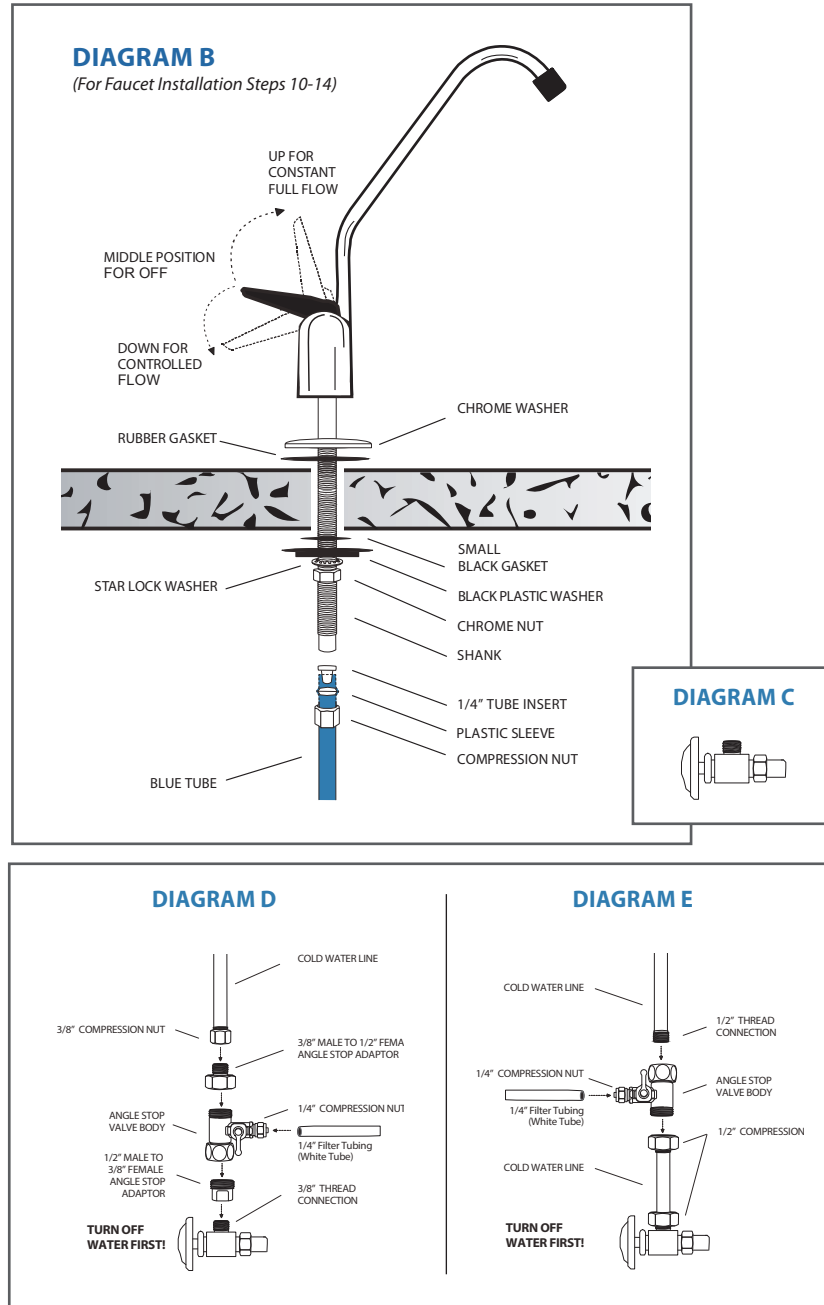

## SYSTEM START UP & FLUSHING RO SYSTEM

### 7. SYSTEM START-UP

1. With all connections complete, turn on the cold water supply to the reverse osmosis system

**IMPORTANT!!** The Reverse Osmosis Main Water Shut Off valve (indicated by the bright orange tag at the side of the unit) must be open. This means the blue handle on the valve must be in the horizontal position.

2. Immediately check entire reverse osmosis system and tank for leaks. If you notice any leaks turn off cold water supply and fix the leak.

**IMPORTANT!!** Ensure that the ball valve on the storage tank is open. This means that the valve handle is in line with the white tubing.

3. Once no leaks have been determined. Lift the lever on the Flowlok Valve and place compressed textile disc in holding cup and lower lever to allow water back into the system.

### 8. FLUSHING THE R.O. SYSTEM

1. The tank will fill in approximately 4-5 hours.
2. After the tank has filled, open the faucet and drain all the water from the tank until it is empty.
3. Within 2-3 hours after draining the first tank or water the water is ready for drinking.

**CAUTION!!** DO NOT USE FIRST TANK OF WATER FROM YOUR SYSTEM! The membrane contains a food grade preservative to protect it while in storage. This preservative is not harmful, however it does not have a pleasant taste. Therefore, do not use the first tank of water, which flushes the entire system removing any preservatives used during storage and preparing it to produce quality water.

**CAUTION!!** If installing the unit in new construction, ensure that house plumbing is flushed thoroughly before opening the water supply valve.

**WARNING!!** Discard all unused parts and packaging material after installation. Small parts remaining after the installation could be a choke hazard.




## QUICK CONNECT FITTINGS

### HOW TO MAKE QUICK CONNECT FITTINGS CONNECTIONS


#### 1. CUT THE TUBING

-Cut the tube cleanly and squarely. Ensure that the tube has a smooth outside diameter without any burrs, chamfers or score marks prior to inserting it into the fitting. Tubing that has not been cut properly can cause drips and leaks.

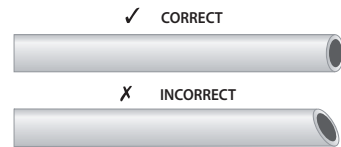


#### 2. INSERT TUBING

Push the tubing through the collet and o-rings until it bottoms out against the tube stop. The collet holds the tube in place and the o-ring provides a leak resistant seal. If you need to remove the tubing always re-cut before connecting tubing again. Scores on tubing can cause failure.

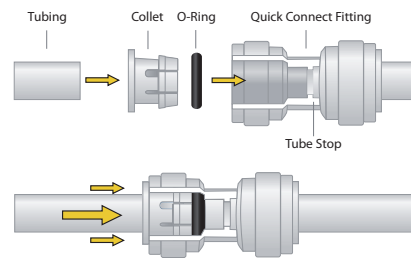


#### 3. INSPECT AND TEST

 Push and pull the tubing toward and away from the fitting to ensure that it has been installed properly. Test and inspect the installation for any leaks.



#### 4. TUBE REMOVAL

 Relieve pressure from the tubing and fitting. Push the collet flange against the fitting body while pulling the tubing away from the fitting to release it.



**CAUTION!! IT IS RECOMMENDED THAT TUBING AND QUICK CONNECTION FITTINGS INSTALLATIONS ARE INSPECTED A MINIMUM OF ONCE PER YEAR AND PARTS REPLACED AS NEEDED.**

## FEEDWATER ADAPTOR

### 3. INSTALLATION OF ANGLE STOP VALVE ADAPTOR



**CAUTION!!** For your safety and protection, do not use where water is microbiologically unsafe or of unknown quality. The water supply to your system **MUST** be from the COLD WATER LINE! Hot water will severely damage your reverse osmosis system!

1. Turn off cold water supply to the sink using the supply valve located under the sink.

*NOTE: In some cases the supply valve may leak or may not work at all. If this happens turn off the water at the main water shut off for the entire house. In extreme cases the house shut off valve does not work. If this happens shut the water off at the street and replace the defective valves immediately. Locate the type of shut off valve you have under your sink and follow that step for connecting the feed water.*

2. Some shut off valves have an extra port for an icemaker hookup. You will not need the angle stop adaptor for this type of installation. ( See *DIAGRAM C* )
3. On some shut off valves you can install the angle stop adaptor directly to the valve. Tighten angle stop adaptor to the valve with an adjustable wrench. Tighten until snug. **DO NOT OVERTIGHTEN!** ( See *DIAGRAM D* )

Most under sink shut off valves have a built in smooth or corrugated riser going up to the faucet. (Refer to *DIAGRAM E* for help with this type of valve.)

Secure an adjustable wrench to the fitting on the cold water side of the sink faucet -- NOT THE R.O. Faucet! Secure another adjustable wrench to the smooth/corrugated riser line nut. Gently undo the riser line from the sink faucet. Do not be alarmed! There will be water left in the line—this is normal. However, if the flow does not stop you probably haven't shut the water off properly. (See the *NOTE* in Step # 1, Section # 3 if you need help with water shut off.)

4. Screw the two supplied 1/2" adaptors onto the fitting coming from the cold water side of the sink faucet. Hand tighten the angle stop adaptor to the cold water line. Take extreme care not to twist or damage the connection to the cold water connection.



**CAUTION!!** Tightening the connector improperly to the faucet could cause irreparable damage to the faucet.

5. Connect the riser from the water shut off valve to the angle stop adaptor. Ensure that the cone washer on the riser tube is in good condition. Connect the riser to the angle stop adaptor. **DO NOT OVERTIGHTEN!** This can cause damage to the riser connection.
6. Insert the 1/4" white tube into angle stop adaptor and then into the SHOK BLOK™ provided. (If not already inserted into the SHOK BLOK™)

**Follow steps 7 and 8 below if not already Pre-installed:**

7. After installing the SHOK BLOK™ (be sure to follow flow direction) insert white tubing into the "IN" on the FLOWLOK™ safety device.
8. From the "OUT" on the FLOWLOK™ device insert 1/4" white tubing to the inlet of the system.

## UNIT PLACEMENT & FLOWLOK INSTALLATION

### 4. WATER FILTRATION SYSTEM PLACEMENT AND MOUNTING

1. Determine if mounting of the water filtration system is necessary or desired. The system does not need to be mounted on the wall of the cabinet if there is room for it to sit on the floor. However, if it is mounted to the side of the cabinet it is easier to change the filters and does not take up floor space.

**IMPORTANT!!** Be very careful not to kink any of the tubing on the water filtration system. If tubing is kinked the tubing can rupture and leak.

2. Position the system on the wall at the desired mounting location 2 - 3 inches from base of cabinet. Using the bracket holes on the back of the bracket, mark on the wall with a pencil where the screws need to be inserted.
3. Set the system aside.
4. Screw the two (2) Phillip head screws (supplied in the installation packet) into the wall at the marked positions.

*NOTE: Let the screw heads protrude from the wall enough to hang the filtration system safely.*

5. Mount the water filtration system onto the screws.

### 5. INSTALLATION OF FLOWLOK LEAK CONTROL VALVE

(If pre-installed, skip this steps)



FLOWLOK is a specially designed shut off valve that turns off your water when a leak is detected. The FLOWLOK valve uses a compressed textile disc which expands upon water contact and pushes the valve lever up to the closed position to stop all water flow into the drinking water system.

*NOTE: The FLOWLOK will not shut off any water leak originating from the stop valve or any other connection which feeds water to it. FLOWLOK is designed to shut off water which is going into the drinking water system. (Please note that you can order replacement textile discs through you local dealer in case a disc accidentally becomes wet and expands.)*

**WARNING!!!** The FLOWLOK valve **MUST** be installed to prevent any water leaks occurring from the drinking water system. Failure to install the FLOWLOK valve will automatically void the product warranty.

1. Locate compressed textile disc and set aside.
2. Place FLOWLOK into fixed position in tray and screw down. (If tray not use proceed to step 3).
3. Place FLOWLOK 2 inches from side wall of cabinet and 4 - 6 inches from the drinking water systems inlet side.
4. Affix the FLOWLOK with screws to the cabinet base (floor) with screws.
5. Lift FLOWLOK Lever to off position.
6. Once final connection is made, remove lever pusher and insert textile disc with the pronounced part towards the bottom and reinsert lever pusher. Lower on/off lever to allow water to flow thru the system.

To view FLOWLOK video go to:  
<http://hydronixwater.com/flowlok-products>

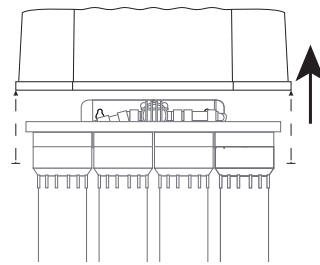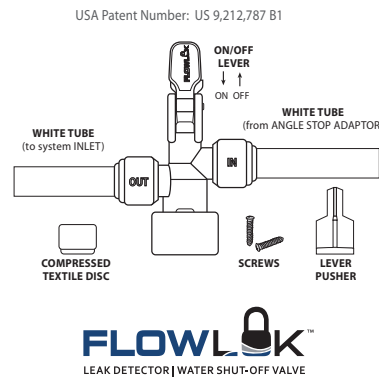

LIFT COVER TO REVEAL BRACKET HOLES

## TUBING & QUICK CONNECT FITTINGS

### 6. TUBING CONNECTIONS

**IMPORTANT!!** Be very careful not to kink any of the tubing on the reverse osmosis system. If tubing is kinked the tubing can rupture and leak.

#### CONNECTING THE SYSTEM:

(BLUE TUBING - From system faucet port. This is from port labeled faucet)

1. Connect the blue tubing to the faucet by slipping the 1/4" chrome nut over the tubing followed by the nylon ferrule.  
*NOTE: It is not necessary to have a 1/4" nylon insert in this line as it would restrict the flow through the faucet.*
2. Push the blue line all the way into the faucet stem and tighten the chrome nut. **DO NOT OVERTIGHTEN!!**

#### CONNECTING THE FEED WATER:

1. Locate the cold water angle stop, turn off cold water and open cold faucet line to de-pressurize.
2. Once de-pressurized remove 3/8" line from your "COLD" water angle stop, screw the Angle Stop Valve Adaptor onto the 3/8" angle stop hand tight.
3. Replace 3/8" line from above onto the Angle Stop Valve Adaptor male side and tighten accordingly.
4. Insert one end of the extra piece of white tubing into the inlet of the Angle Stop Valve Adaptor.
5. From the inlet of the Angle Stop Valve Adaptor connect the white tubing to the Shok Blok™ system protection valve and ensure the flow arrow is in the correct direction towards the unit.

#### Follow steps 6 and 7 if not already Pre-installed:

6. From the out let of the Shok Blok™ connect one side of the white tubing to the port marked "In" on the flow lok leak control valve.
7. From the "out" port on the FLOWLOK™ leak detector connect the white tubing to the RO system marked "In".

#### CONNECTING THE TANK:

(WHITE TUBING - From system tank port)

Insert the white tubing from the RO system "Tank" Into the Quick Connect Tank Valve provided on top of the the tank.

#### CONNECTING THE DRAIN SADDLE:

(BLACK TUBING - From system drain port)

Insert the 1/4" black tubing into the Quick Connect Drain Saddle.

(Continues on page 12...)